



Fujifilm FinePix XP80 Exterior Case Replacement

This guide will contain the first steps to take before replacing other components of the device.

Written By: Busra Atalay





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Exterior Case



- Locate and remove the screws (2mm, 5 each) on the bottom of the camera, using PH000 Phillip hex head bit.

Step 2




- Located and remove the screws (2mm, 2 each) from the top of the camera, using H1.3 hex head bit.

Step 3



- Locate and remove the screws (2mm, 2 each) on the side of the camera, using H1.3 hex head bit.

Step 4

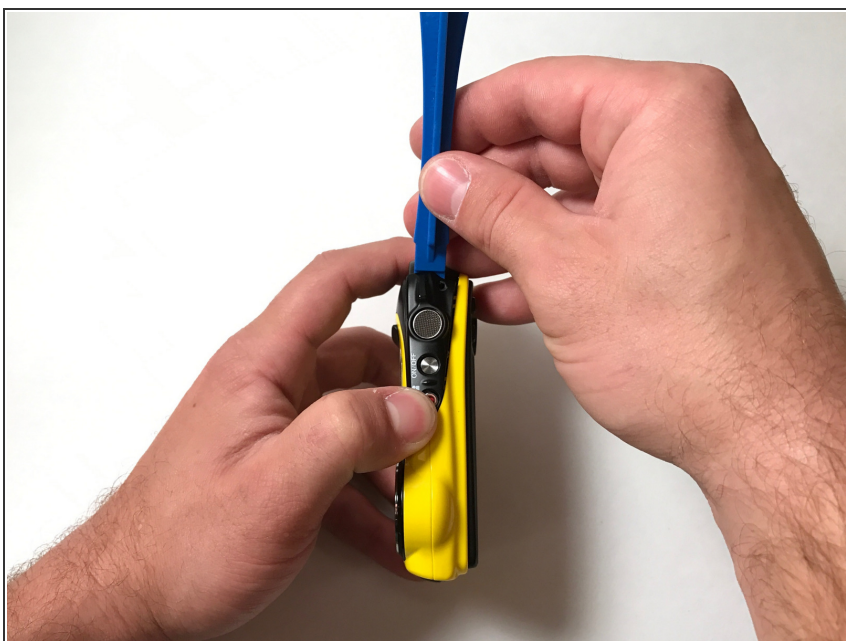

- Using a plastic opening tool, gently start to pry the button case, located at the top of the camera, so it unclips.

Step 5



- Continue to the side of the camera to gently pry the side area of the case apart.

Step 6



- Continue to the bottom of the camera and gently pry the case apart.

Step 7



- It is now safe to remove the yellow front panel. While using your plastic opening tool, gently pry the front panel away from the camera.
- Once the front is removed, the yellow back panel can be taken off with just your hands.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 07:58:23 PM.